

RST-AE Series User's Manual

High precision motorized rotation stages with built-in direct reading encoders




Zaber's products are not intended for use in any critical medical, aviation, or military applications or situations where a product's use or failure could cause personal injury, death, or damage to property. Zaber disclaims any and all liability for injury or other damages resulting from the use of our products.

Zaber's autodetect peripheral axes are designed to be used effortlessly with Zaber's line of autodetect controllers. The RST240-AE includes onboard memory that allows Zaber's controllers to autodetect the model and set reasonable parameters. See the [Protocol Manual](#) for more information on how to modify the settings. Damage to the axis may result if the settings are not correct. To use your Zaber peripheral with a third-party controller, review the motor, sensor, and encoder specifications and pin-outs carefully.

Noise Emissions

The A-weighted emission sound pressure level (SPL) of this device does not exceed 70 dB(A) during intended use.

Payload Caution

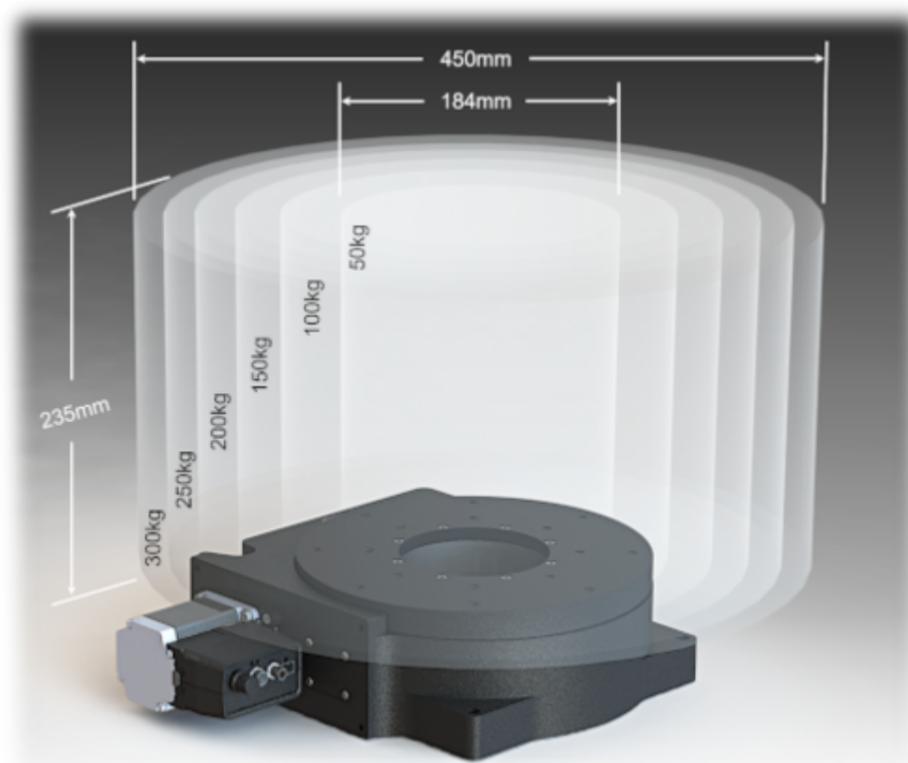

This image shows a RST240-AE with varying payloads to demonstrate the relative size of large payloads that meet the maximum angular momentum specification of $1.6 \text{ kg}\cdot\text{m}^2/\text{s}$ when rotated at the angular speeds listed below. The size of these solid cylindrical payloads was determined using the density of steel of $8,000 \text{ kg}/\text{m}^3$. The maximum allowable rotational speed of the 300kg load is $12^\circ/\text{s}$ or 2 RPM. The rated maximum speed of the device of $60^\circ/\text{s}$ can be safely met with a 125kg payload, or less. It is important to determine the moment of inertia of your payload. In the event of a sudden stall from high speeds, higher inertia payloads will impart large forces through the drivetrain of the RST240-AE, resulting in possible damage.

The below table lists the maximum allowable speed a particular payload can be rotated at, in order to not exceed the maximum angular momentum of $1.6 \text{ kg}\cdot\text{m}^2/\text{s}$ for the RST240-AE.

Payload, m [kg]	Example Inertia, I [kg·m ²]	Maximum Allowable Speed, [°/s]
50	0.21	60
100	0.85	60
150	1.89	48
200	3.39	27
250	5.28	17
300	7.58	12

- Fixed width type indicates communication to and from a device. The `\r` symbol indicates a carriage return, which can be achieved by pressing enter when using a terminal program.
- An **ASCII command** followed by (T:xx) indicates a legacy T-Series **Binary Protocol** command that achieves the same result. For example, `move abs 10000 (T:20:10000)` shows that a move abs ASCII command can also be achieved with Binary command number 20.

Not all ASCII commands have an equivalent Binary counterpart.

AutoDetect

Your RST240-AE peripheral is equipped with AutoDetect, a feature that allows a Zaber controller to automatically configure its settings for the peripheral when it is connected.

💡 **Important:** The controller should always be powered down before disconnecting or connecting your RST240-AE peripheral.

To connect the peripheral to a controller:

- Power off the controller.
- Connect the RST240-AE peripheral.
- Power on the controller.
- The controller will activate the peripheral shortly after it is powered on.


Connectors

Recommended controller(s) for your RST240-AE peripheral are provided in the product specifications. Zaber's controllers and peripherals are designed for ease of use when used together. Optimal settings for each peripheral are automatically detected by Zaber's controllers when the device is connected.

For reference, the pinout for the peripheral cable connectors is shown below:

Motor and Sensor Interface

Pin	Description	Pin	Description
1	AutoDetect Clock	14	N.C.
2	AutoDetect Data	15	+5V
3	N.C.	16	Ground
4	N.C.	17	N.C.
5	Home Limit Sensor	18	Motor B1
6	N.C.	19	Differential Encoder A-
7	Ground	20	Differential Encoder B-
8	Motor A2	21	Differential Encoder Index-
9	Motor A1	22	AutoDetect Presence
10	Differential Encoder A+	23	N.C.
11	Differential Encoder B+	24	N.C.
12	Differential Encoder Index+	25	N.C.
13	Differential Encoder Error	26	Motor B2

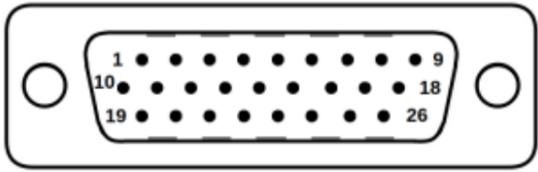

Male High Density D-sub26 Connector
Motor and Sensor Interface

NOTE: All hall sensor signals (for limits or motor phase) are open collector and require a pull-up on the controller.

NOTE: All single-ended encoder inputs are non-isolated 5V TTL lines.

NOTE: All differential encoder signals are non-isolated, and must be terminated on the controller with 120 Ω . For -AE peripherals, these signals are sinusoidal with 1 V peak-to-peak differential levels and with the common mode between 1.5 V and 2.5 V.

Alternate Controllers

The RST240-AE can be controlled by any 2-phase stepper motor controller with limit sensor and appropriate encoder input. **We do not recommend using your own controller unless you are familiar with how to control a stepper motor with hall sensor limit switches.** Damage to the stage due to incorrect wiring is not covered by warranty.

Motors & Encoders


For motor and encoder information see the [RST240-AE product page](#)

Limit Sensors

Hall effect sensors are used in the RST240-AE as home sensors. The Hall sensors used are part number A1120LLHLT-T made by Allegro. [Click here for data sheet.](#) Your controller should be configured so the stage stops immediately (quick deceleration) when the sensors are triggered.

- PCB wire colour code:
 - 5 Vdc input - red
 - Home signal - yellow
 - Away signal - white
 - Ground - black

The Hall sensor has an open-collector output. The default output is high impedance when the Hall sensor is not active. When the sensor detects a magnet, the Hall sensor pulls the output low to ground.

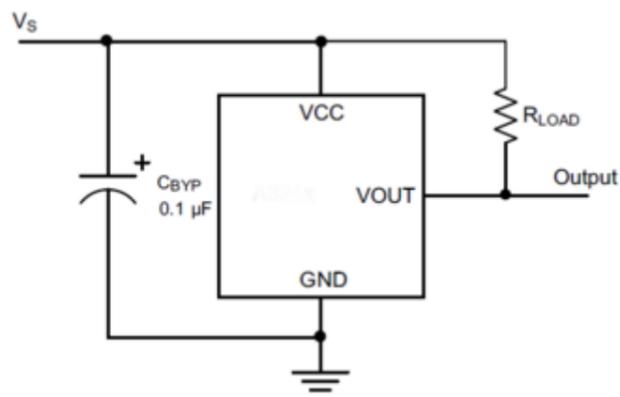

If you are not using a Zaber controller, ensure that your controller has a pull-up resistor on the output line of each Hall sensor as shown in the diagram. The bypass capacitor is optional, but may help to eliminate false triggering in noisy environments. The typical value for the pull-up resistor (R_{LOAD}) is 10 k Ω and for the bypass capacitor is 0.1 μ F to 1 μ F. The larger the capacitance, the better the noise filtering but the slower the response time.

Mounting

Secure the RST240-AE with 4 M8 (or 5/16"-18) socket cap screws, 40 mm or longer, by the 5 M8 mounting holes on the bottom flanges of the stage. There are also M6 threaded holes on the side of the stage available for mounting purposes. See the [RST240 web page](#) for dimensions, technical specifications and other details.

Maintenance


RST240-AE devices use precision worm gears for rotary motion. To insure long service life and the highest performance, it is necessary to keep the worm gear mesh lubricated.

The worm gear should be re-greased after the first 200 hours of operation and every 1000 hours of operation thereafter. Many factors affect the re-lubrication interval including temperature, contamination, and load. Inspect device for noise or vibration and re-lubricate based on inspection results. At high torque loads, the re-lubrication interval will be shortened, inspect the device more frequently depending on application.


Temporarily remove power to the device before attempting to lubricate. **Remove** any payloads from the device stage top if they pose **tipping, crushing, pinching and/or other hazards**.

Slowly rotate stage (<5 RPM) while adding 7.5 cc's of lubricant into the grease fitting. The stage should complete a full revolution before all 7.5 cc's of lubricant are added. It is recommended to rotate the stage 10 revolutions clockwise and counterclockwise to distribute the grease. Grease with DuPont Molykote® G-4700 or similar viscosity synthetic NLGI Grade 2 lithium thickened grease with solid lubricants. All devices come pre-lubricated and are ready to go out of the box.


If RST240-AE devices are used in applications where only a small angular portion of the rotational travel range is used, occasionally rotate the stage throughout its full travel to maintain an even lubrication film over the entire worm gear and redistribute the lubrication in the bearings.

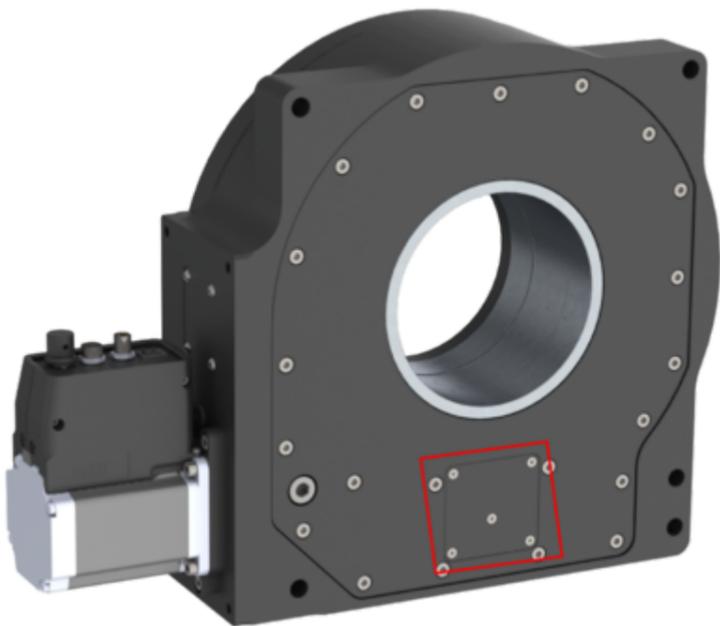

1. Locate the grease fitting cover on the bottom of the device.

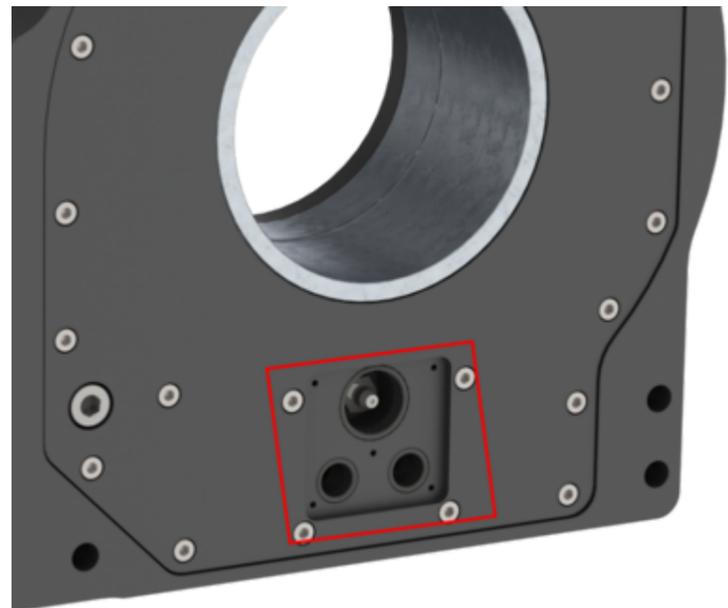


2. Remove the 5 M2.5 screws. Lift the cover plate out with a dull flat bladed tool.

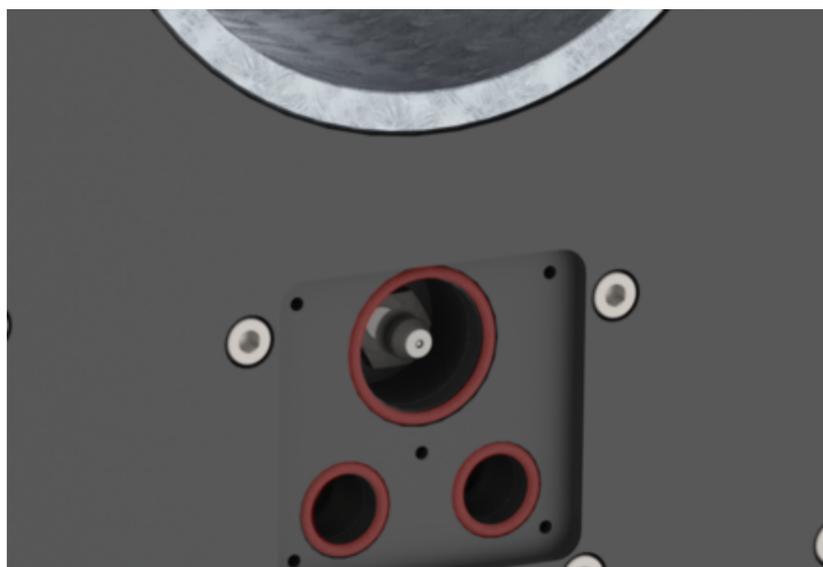



3. Leave the 3 o-rings in place.

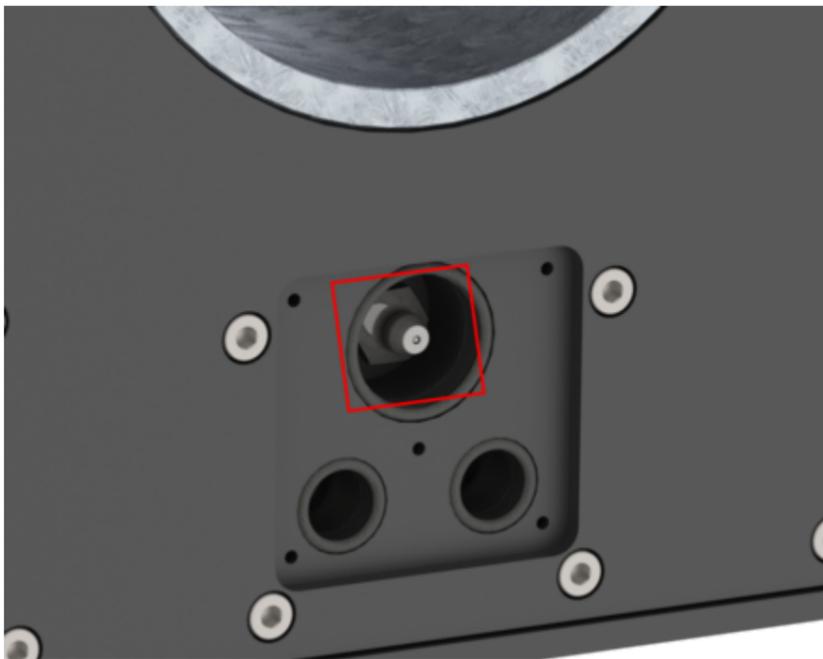

4. Add new lubricant through the grease fitting. Wipe fitting and area clean. Reinstall the cover plate removed in step 2 with the 5 M2.5 screws.

For Zaber's policies on warranty and repair, please refer to the [Ordering Policies](#).

Standard products

Standard products are any part numbers that do not contain the suffix ENG followed by a 4 digit number. Most, but not all, standard products are listed for sale on our website. All standard Zaber products are backed by a one-month satisfaction guarantee. If you are not satisfied with your purchase, we will refund your payment minus any shipping charges. Goods must be in brand new saleable condition with no marks. Zaber products are guaranteed for one year. During this period Zaber will repair any products with faults due to manufacturing defects, free of charge.

Custom products

Custom products are any part numbers containing the suffix ENG followed by a 4 digit number. Each of these products has been designed for a custom application for a particular customer. Custom products are guaranteed for one year, unless explicitly stated otherwise. During this period Zaber will repair any products with faults due to manufacturing defects, free of charge.

How to return products

Customers with devices in need of return or repair should contact Zaber to obtain an RMA form which must be filled out and sent back to us to receive an RMA number. The RMA form contains instructions for packing and returning the device. The specified RMA number must be included on the shipment to ensure timely processing.

If you would like to receive our periodic email newsletter including product updates and promotions, please sign up online at www.zaber.com ([news section](#)). Newsletters typically include a promotional offer worth at least \$100.

Contact Zaber Technologies Inc by any of the following methods:

Phone	1-604-569-3780 (direct) 1-888-276-8033 (toll free in North America)
Fax	1-604-648-8033
Mail	#2 - 605 West Kent Ave. N., Vancouver, British Columbia, Canada, V6P 6T7
Web	www.zaber.com
Email	Please visit our website for up to date email contact information.


The original instructions for this product are available at <https://www.zaber.com/manuals/RST240-AE>.

Please see [the Zaber Support Page](#) for default settings for this device.


ZABER

RST240-AE Motorized Rotary Stage

dimensions in mm

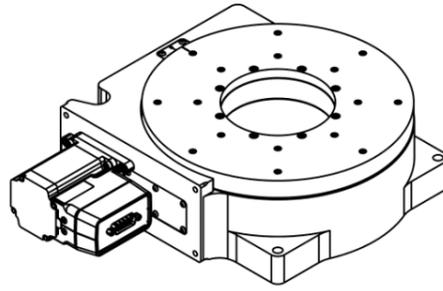

*See product page for complete list of available models at www.zaber.com

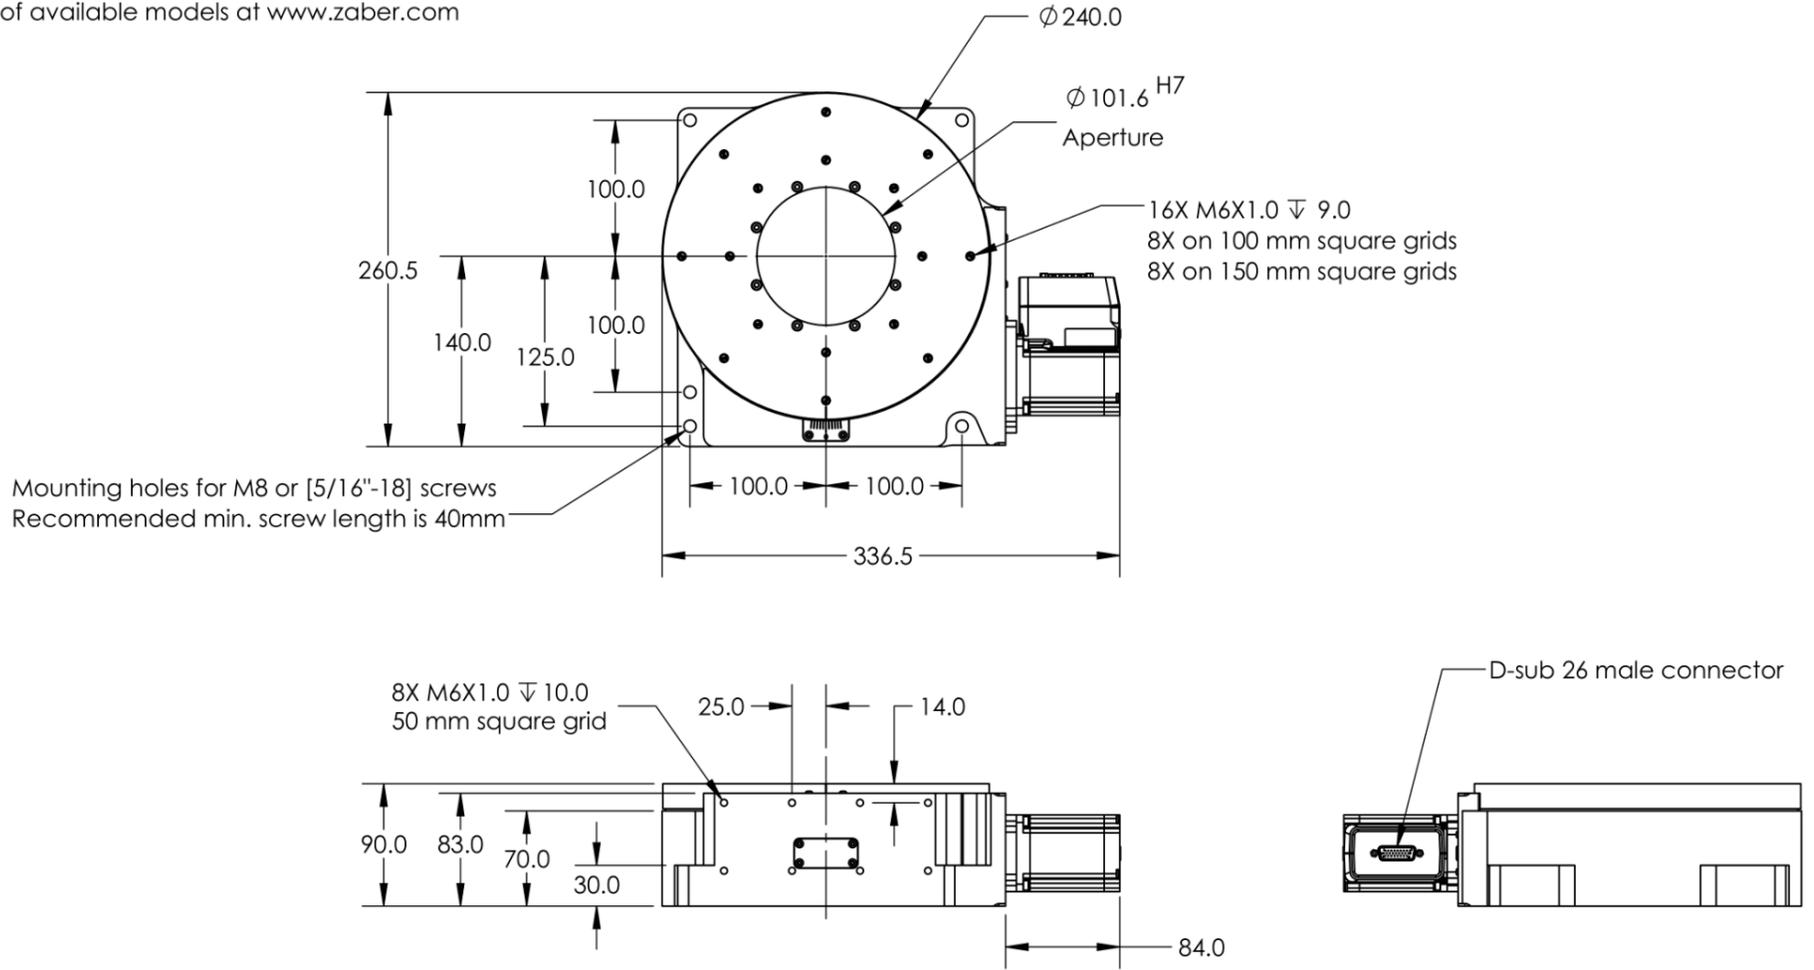


DWG 3728 R01

Specification	Value	Alternate Unit
Microstep Size (Default Resolution)	0.00027574°	4.812 μrad
Built-in Controller	No	
Recommended Controller	X-MCC (48 V) Recommended	
AutoDetect	Yes	
Range	360°	
Accuracy (unidirectional)	0.008°	0.139600 mrad
Repeatability	< 0.0015°	< 0.026 mrad
Backlash	< 0.005°	< 0.087 mrad
Maximum Speed	60°/s	10 rpm
Encoder Count Size	0.00003814°/count	0.137304 arc sec/count
Minimum Speed	0.000168°/s	2.932 μrad/s
Speed Resolution	0.000168°/s	2.932 μrad/s
Encoder Resolution	2360000 CPR	9440000 states/rev
Encoder Type	Direct reading optical encoder	
Maximum Torque	7000 N·cm	9912.8 oz·in
Maximum Continuous Torque	4500 N·cm	6372.5 oz·in
Maximum Centered Load	3000 N	672.8 lb
Maximum Cantilever Load	200 N·m	147.6 ft·lb
Guide Type	Crossed-Roller Bearing	
Stage Top Dimension	240 mm	9.449"

Specification	Value	Alternate Unit
Radial Error Motion	+/- 2.5 μm	+/- 0.000098"
Axial Error Motion	< 4 μm	< 0.000157"
Tilt Error Motion	+/- 0.003°	+/- 52.36 μrad
Bearing Plane Offset	30.75 mm	1.211"
Angular Motion Per Motor Rev	3.5294°	
Motor Steps Per Rev	200	
Motor Type	Stepper (2 phase)	
Motor Rated Current	4200 mA/phase	
Motor Winding Resistance	0.53 ohms/phase	
Inductance	2 mH/phase	
Motor Connection	D-sub 26	
Default Resolution	1/64 of a step	
Maximum Angular Momentum	1.6 $\text{kg}\cdot\text{m}^2/\text{s}$	
Motor Frame Size	23	
Mechanical Drive System	Precision Worm Gear	
Limit or Home Sensing	Optical Index Mark	
Gear Ratio	102:1	
LED Indicators	No	
Mounting Interface	M6 threaded holes and M8 mounting holes	
Operating Temperature Range	0-50 °C	
Vacuum Compatible	No	
RoHS Compliant	Yes	
CE Compliant	Yes	
Weight	15.6 kg	34.392 lb

Charts and Notes

Torque Speed Performance

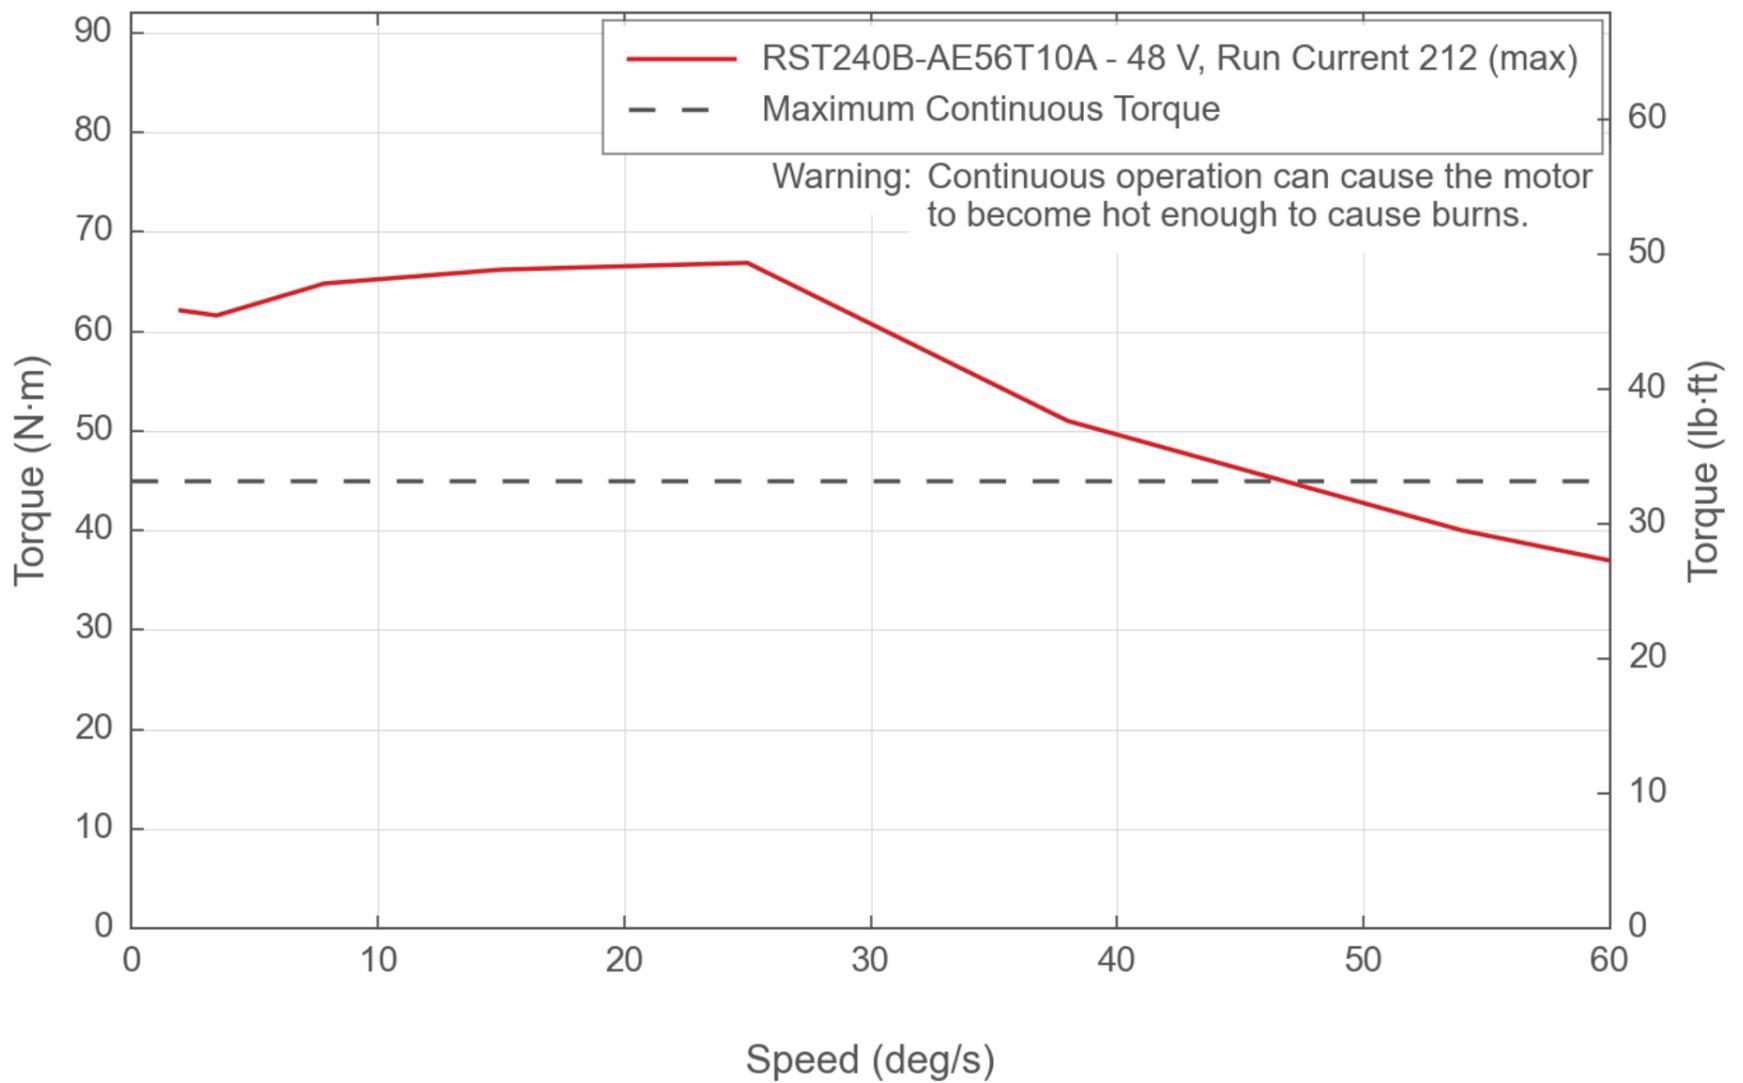

This product uses the FreeRTOS kernel. FreeRTOS is © 2022 Amazon.com, Inc. or its affiliates and is governed by the following license:

All rights reserved.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT.

IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

This product uses the LZ4 compression library. LZ4 is © 2011–2016 Yann Collet and is governed by the following license:

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.